





To know Brodersen WorkSuite function block is compatible with existing RTU firmware version:

Step # 1: Right click on you project and select configuration.

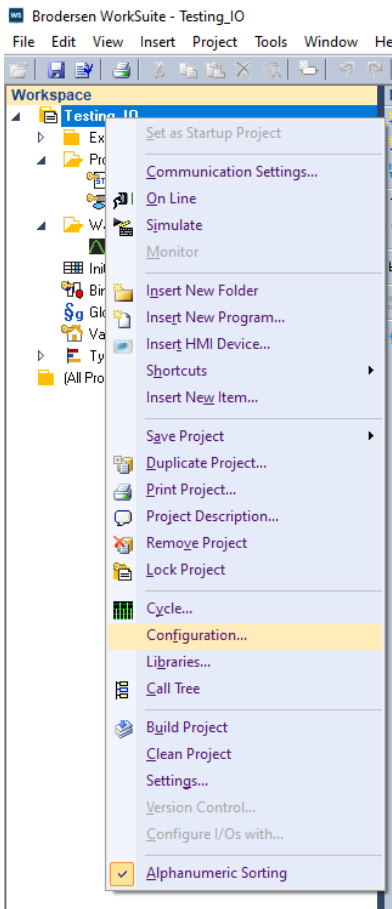


Step # 2: Click Upload and select your RTU IP address and then click ok.

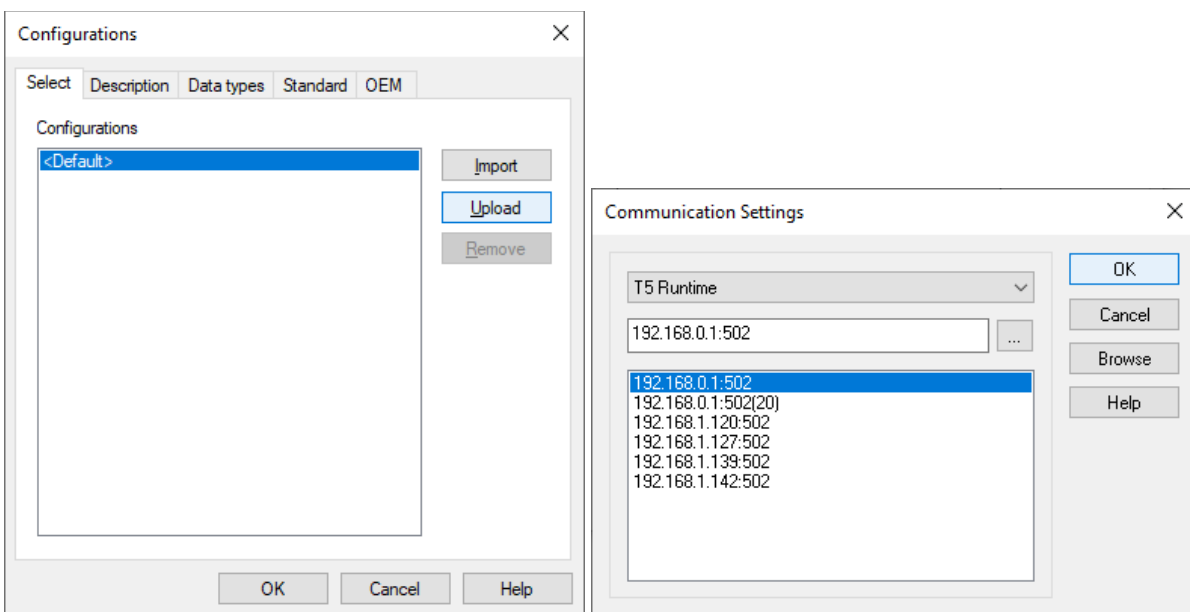



Step # 3: Save the configuration with a file name and click OK.

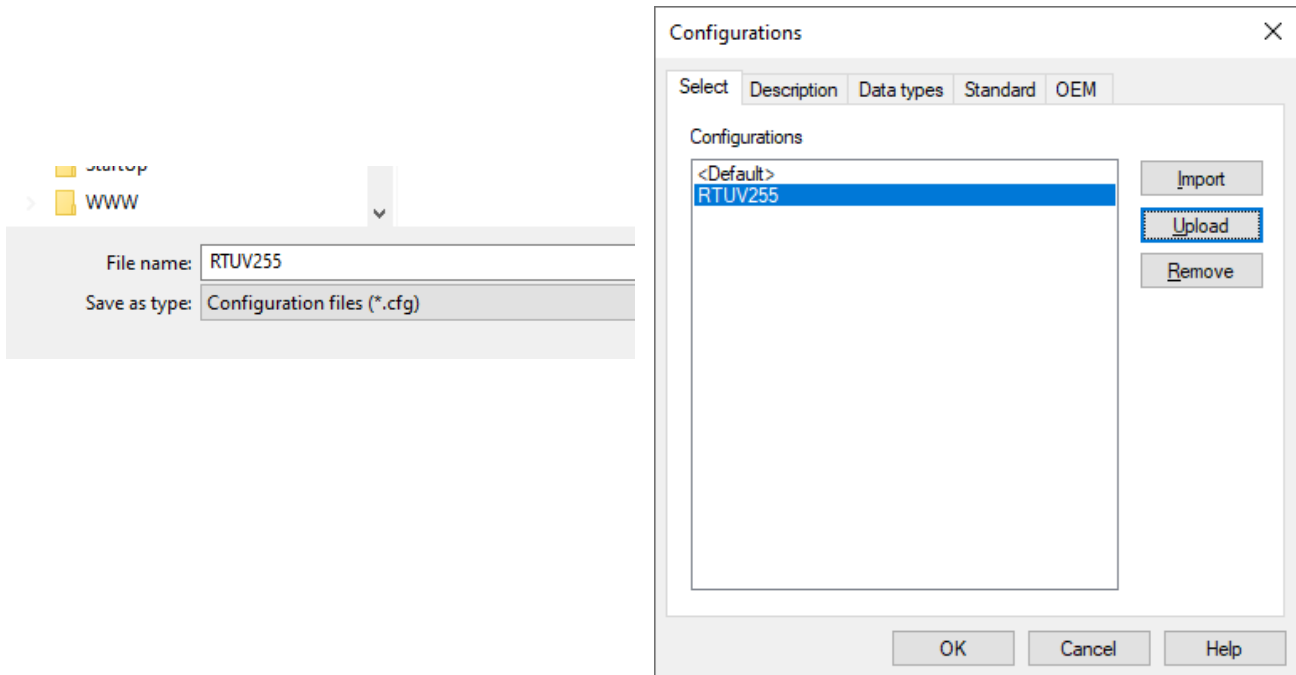

Step # 4: Red colored blocks are not supported with current firmware version.

